

Ease the burden of mechanical repairs.

Kia vehicles are solidly built with leading technology, but inevitably even the most well engineered vehicles will require repairs. Kia Protect Mechanical Breakdown Protection (MBP) covers many costly vehicle components that can potentially fail over time.

Kia Protect MBP provides comfort in knowing your vehicle is protected should an unexpected covered breakdown occur. Simply take your vehicle to any Kia dealership and our factory trained technicians will handle the rest. With several coverage levels, term lengths and deductibles, your protection plan can be customized just for you.

In addition to covering the cost of most major mechanical failures, Kia Protect MBP is packed with additional benefits such as 24 hour roadside assistance, a car rental allowance, and a trip interruption benefit. With coverage throughout Canada and the continental United States, you can rest assured knowing you're protected.

Levels of coverage.

All plans available on New and Used Kia Vehicles.

5 Star Plan

Supreme protection for total peace of mind. All components are covered except for a select list of exclusions.

4 Star Plan

Extensive coverage across the powertrain and many other critical vehicle components that can be costly to repair.

3 Star Plan

Essential coverage for major powertrain components on your Kia. Maximum coverage limit of \$4,000 per repair visit.

Additional benefits.

Besides exceptional coverage to protect your vehicle, Kia Protect MBP comes complete with an array of additional benefits, with no deductible.

24 hour roadside assistance

✓ Towing
✓ Battery jump start

✓ Lock-out service ✓ Fuel delivery

✓ Winching
✓ Flat tire changes (using spare tire)

Trip interruption

Reimbursement of lodging and meal expenses if a covered breakdown occurs while you are on a road trip and repairs last overnight (\$150 per day, up to \$750 per repair visit).

Rental benefit

Replacement car while your vehicle is being repaired (\$65 per day, up to \$260 per repair visit).

Transferable

If you sell your vehicle, Kia Protect MBP is transferable to the next private owner.

Multimedia software

The cost of all Kia recommended software updates to your vehicle's entertainment and navigation systems are covered (up to \$500).

Claim-Free reward¹

If no claims have been filed or additional benefits utilized by the time your Kia Protect MBP coverage expires, you may choose from one of the following three reimbursement options:

- Selling dealer will credit the total amount paid for your contract towards the purchase of a new Kia Protect MBP contract; or
- **b.** A store credit at your selling dealer for the full amount paid for your contract (inclusive of taxes) up to \$2,000; or
- **c.** A refund cheque of the amount paid for your contract (inclusive of taxes) up to \$1,000.

Kia Mechanical

Breakdown

Protection.

Unexpected repairs may be closer than they appear.

Mechanical breakdowns can happen when you least expect them and are often costly to repair. With Kia Protect Mechanical Breakdown Protection on board, you will enjoy:

- The security of knowing your Kia is covered for many common and expensive component failures and mechanical breakdowns.
- Maximized re-sale of your Kia with coverage that is transferable to another private owner.
- 24 Hour roadside assistance to help get your Kia back on the road as quickly as possible.
- Car rental coverage should your Kia be at the dealer for a covered repair

Typical repair costs.

In the event of a mechanical breakdown, a quality repair may cost more than you think.²

Engine Replacement	\$7,835
Differential Repair	\$1,585
Alternator Replacement	\$525
Air Conditioner Repair	\$575
Fuel Pump Replacement	\$450
Radiator Repair	\$580
Transmission Replacement	\$6,445
Leaking Cylinder Head Gasket	\$1,380
4 Wheel Drive Transfer Case Repair	\$670
Master Brake Cylinder Replacement	\$635
Power Window Motor Replacement	\$380
Airbag Assembly Replacement	\$1,060

At a glance. 5 Star Plan Covered items Engine Turbocharger/Supercharger Transmission Transfer Case Drive Axle Steering **Brakes** Electrical Electric/Hybrid Vehicle Components Air Conditioner **Fuel Delivery** Front and Rear Suspension Cooling All vehicle components² (other than a list of exclusions) Additional benefits. 24 Hour Roadside Assistance

Trip Interruption

Car Rental Benefit

Multimedia Software

Claim-Free Reward








Program highlights.

Consider these reasons to purchase Kia Protect Mechanical Breakdown Protection today:

- Fully backed by Kia Canada Inc. there is no comparison.
- Lock-in future repair costs with today's money.
- Make affordable monthly payments.
- Quality new or remanufactured parts for your Kia vehicle.
- Experienced and licensed Kia technicians to perform your repairs.
- Coverage throughout Canada and continental U.S.
- Fully refundable within 30 days of purchase.
- Valuable additional benefits including rental vehicle, 24 hour roadside assistance, and trip interruption commence at time of purchase.
- Fully transferable to next private owner.
- Maximize resale value.

Contact your local Kia dealer, call our toll-free number at 1-866-475-8864, or visit kia.ca/kiaprotect to learn more about Kia Protect products.

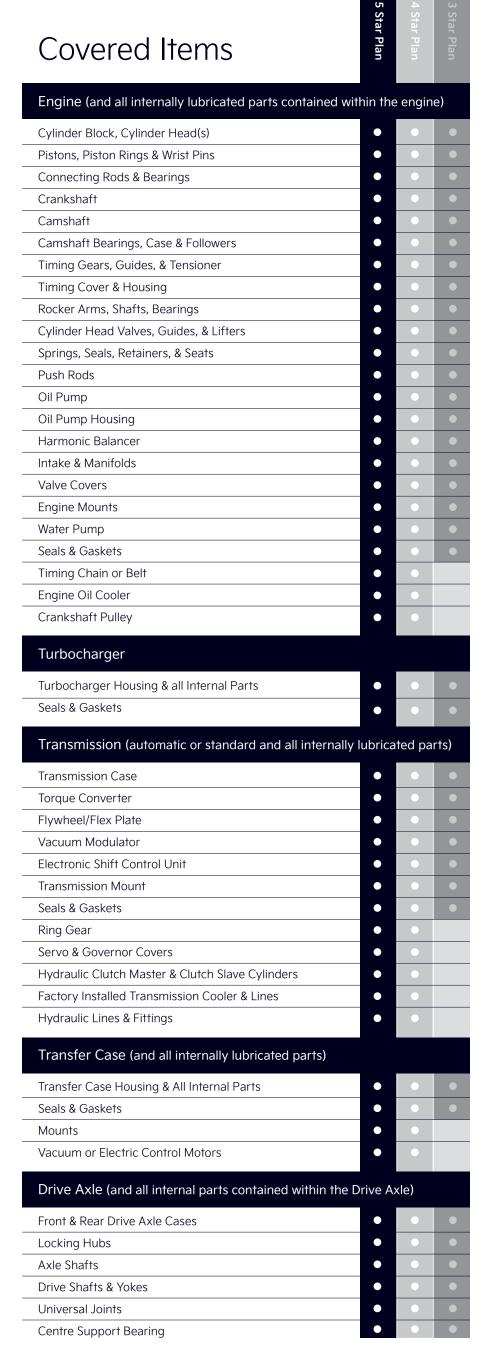

Protect

Constant Velocity Joints Wheel Bearings/Hub Assemblies Aule Bearings Four-Wheel Drive Actuator Differential Cover Seals & Gaskets Steering Rack & Pinion Steering Gear (all Internal parts) Power Steering Pump Steering Rhuckle Steering Column Assembly Seals & Gaskets Control Valve Tire Rod Ends & Boots Cooler High Pressure Hoses Return Hoses Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Brake Hydraulic Lines & Fittings Brake Hydr		5 Star Plan	4 Star Pla	3 Star Plan
Wheel Bearings/Hub Assembilies Axle Bearings Four-Wheel Drive Actuator Differential Cover Seals & Gaskets Steering Rack & Pinion Steering Gear (all internal parts) Power Steering Pump Steering Runckle Steering Column Assembly Seals & Gaskets Control Valve Tie Rod Ends & Boots Cooler High Pressure Hoses Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Ignilion Coil Gauges		an	an	an
Axile Bearings Four-Wheel Drive Actuator Differential Cover Seals & Gaskets Steering Rack & Pinion Steering Gear (all internal parts) Power Steering Pump Steering Knuckle Steering Column Assembly Seals & Gaskets Control Valve Tie Rod Ends & Boots Cooler High Pressure Hoses Return Hoses Return Hoses Return Hoses Waster Cylinder Vacuum/Assist Booster Uisc Brack Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ingrition Module Electronic Powertrain Control Module Electronic Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Usasher Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Constant Velocity Joints	•	•	•
Four-Wheel Drive Actuator Differential Cover Seals & Gaskets Steering Rack & Pinion Steering Gear (all internal parts) Power Steering Pump Steering Knuckle Steering Column Assembly Seals & Gaskets Control Valve Tire Rod Ends & Boots Cooler High Pressure Hoses Return Hoses Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Seit Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Sylinders Seit Adjusters Return Springs Brake Hydraulic Lines & Fittings Wheel Sylinder Server My Steep Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenold & Drive Engine Compartment Wiring Hamess Electronic Powertrain Control Module Electronic Step Sensor Electronic Step Switch English Switch & Headlamp Switch Eront & Rear Window Wiper Motor(s) Electronic Switch & Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Wheel Bearings/Hub Assemblies	•	•	•
Seals & Gaskets Sieering Rack & Pinion Steering Gear (all internal parts) Power Steering Pump Steering Knuckle Steering Column Assembly Seals & Gaskets Control Valive Tie Rod Ends & Boots Cooler High Pressure Hoses Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valive ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignilion Coil Gauges	Axle Bearings	•	•	•
Seals & Gaskets Steering Rack & Pinion Steering Gear (all internal parts) Power Steering Pump Steering Knuckle Steering Column Assembly Seals & Gaskets Control Valve Tie Rod Ends & Boots Cooler High Pressure Hoses Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Four-Wheel Drive Actuator	•	•	•
Rack & Pinion Steering Gear (all internal parts) Power Steering Pump Steering Knuckle Steering Column Assembly Seals & Gaskets Control Valve Tie Rod Ends & Boots Cooler High Pressure Hoses Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Powertrain Control Module Electronic Jinition Module Ignition Switch Fromt & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Differential Cover	•	•	•
Rack & Pinion Steering Gear (all internal parts) Power Steering Fump Steering Knuckle Steering Column Assembly Seals & Gaskets Control Valve Tie Rod Ends & Boots Cooler High Pressure Hoses Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Power train Control Module Electronic Ignition Module Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Seals & Gaskets	•	•	•
Power Steering Pump Steering Knuckle Steering Column Assembly Seals & Gaskets Control Valve Tie Rod Ends & Boots Cooler High Pressure Hoses Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Seif Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Steering			
Power Steering Pump Steering Knuckle Steering Column Assembly Seals & Gaskets Control Valve Tie Rod Ends & Boots Cooler High Pressure Hoses Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Seif Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Rack & Pinion Steering Gear (all internal parts)	•		•
Steering Knuckle Steering Column Assembly Seals & Gaskets Control Valve Tie Rod Ends & Boots Cooler High Pressure Hoses Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Confrol Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges		•	•	•
Steering Column Assembly Seals & Gaskets Control Valve Tie Rod Ends & Boots Cooler High Pressure Hoses Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges		•	•	•
Seals & Gaskets Control Valve Tie Rod Ends & Boots Cooler High Pressure Hoses Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Ignition Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges		•	•	•
Tie Rod Ends & Boots Cooler High Pressure Hoses Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges		•	•	•
Cooler High Pressure Hoses Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Control Valve	•	•	•
Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Ignition Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Tie Rod Ends & Boots	•	•	•
Return Hoses Lines & Fittings Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Cooler	•	•	
Brakes Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Ignition Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	High Pressure Hoses	•	•	
Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Ignition Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Return Hoses	•	•	
Master Cylinder Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Lines & Fittings	•	•	
Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Brakes			
Vacuum/Assist Booster Disc Brake Calipers Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Master Cylinder	•	•	•
Wheel Cylinders Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges		•	•	•
Proportioning Valve ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Disc Brake Calipers	•	•	•
ABS Hydraulic Control Unit Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Wheel Cylinders	•	•	•
Accumulator & Pump ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Proportioning Valve	•	•	•
ABS Electronic Control Module Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	ABS Hydraulic Control Unit	•	•	•
Seals & Gaskets Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Accumulator & Pump	•	•	•
Backing Plates Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	ABS Electronic Control Module	•	•	•
Self Adjusters & Return Springs Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Seals & Gaskets	•	•	•
Brake Hydraulic Lines & Fittings Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Backing Plates	•	•	
Wheel Speed Sensors Electrical Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Self Adjusters & Return Springs	•	•	
Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges		•	•	
Alternator Regulator Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Wheel Speed Sensors		•	
Voltage Regulator Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Electrical			
Starter Motor Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Alternator Regulator	•	•	•
Solenoid & Drive Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Voltage Regulator	•	•	•
Engine Compartment Wiring Harness Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	Starter Motor	•	•	•
Electronic Powertrain Control Module Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges		•	•	•
Electronic Ignition Module Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges				•
Ignition Switch Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges				•
Front & Rear Window Wiper Motor(s) Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges				•
Stop Lamp Switch & Headlamp Switch Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	-			
Turn Signal Switch & Multifunction Switch Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges				
Heater/A.C. Blower Speed Switch Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges				
Manual Heater/A.C. Control Assembly Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges				•
Horns Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges		•		•
Washer Pump & Switch Crank Angle Sensor Ignition Coil Gauges	· · · · · · · · · · · · · · · · · · ·	•	•	•
Crank Angle Sensor Ignition Coil Gauges		•	•	•
Ignition Coil • • • • • • • • • • • • • • • • • • •	<u> </u>	•	•	
·	-	•	•	
Cruise Control System	Gauges	•	•	
	Cruise Control System	•	•	
Power Window Motor(s) & Power Window Switch	Power Window Motor(s) & Power Window Switch	•	•	

Electric / Hybrid Vehicle Components⁴ Home Battery Charger Electric/Hybrid Battery Hybrid Starter Generator Hybrid Power Control Unit Automatic Transmission including Traction Motor Air Conditioner Condenser & Compressor Clutch & Pulley Air Conditioning Lines & Hoses **Evaporator & Expansion Valve** Idler Pulley & Idler Pulley Bearing High/Low Compressor Cut-Off Switch Receiver/Dryer Refrigerant in conjunction with the repair or replacement of a component listed above Seals & Gaskets **Fuel Delivery** Fuel Pump & Relay Fuel Distributor & Injectors Vacuum Pump Metal Fuel Delivery Lines Seals & Gaskets Fuel Injection Sensors & Control Units (except Oxygen Sensor) Fuel Pressure Regulator Front & Rear Suspension Upper/Lower Control Arms & Shafts Bearings & Bushings **Upper Ball Joints** Lower Ball Joints Radius Arm & Bushings Torsion Bars, Mounts & Bushings Stabiliser Bar, Links & Bushings Spindle & Spindle Support Cooling Engine Cooling Fan, Motor & Relay Water Pump & Pulley Fan Clutch Serpentine Belt Tensioner Radiator/Heater Core Thermostat

Rear Defroster Switch

Power Door Lock Actuator & Switch

5 Star Plan non-covered components.

Accessory items

Cell Phones, Electronic Keyless Entry Transmitter (Key Fob), Non-Factory Audio Equipment, Tire Pressure Sensors.

Maintenance related item

Exhaust and Emission Systems, Batteries, Shock Absorbers, Struts / Mounting Plates, Clutch Assembly, Brake Rotors and Drums, Friction Clutch Disc and Pressure Plate, Light Bulbs, Fuses, Throw Out Bearing, Door and Trunk handles, Safety Restraint Systems.

Cosmetic items

Glass, Lenses, Sealed Beams, Weather Strips, Trim Items, Moldings, Bright Metal, Chrome, Upholstery and Carpet, Paint, Outside Ornamentation, Bumpers, Body Sheet Metal and Panels, Frame and Structural Body Parts.

5 Star Plan.

Some examples of additional covered components are:

- Airbags

Wire Harnesses

- Body Control Modules
- Heated Seat Elements
 Keyless Entry Module
 Fuse Box / Power Distribution Module
- Keyless Entry Module
 Heater / Vent Control
 DRL Module
 Call Society
 - Coil SpringsWindow Regulators
- Windshield Washer Reservoir & Spray Nozzles
- Rear Park Distance
 Monitoring System

Blower Motor

Seals & Gaskets

Hot Water Control Valve

Multimedia Software Package

All Vehicle Components³

(other than a list of exclusions)

 Door Latch Assembly & Lock Cylinders

Superior Coverage

Photo is for illustrative purposes only.